
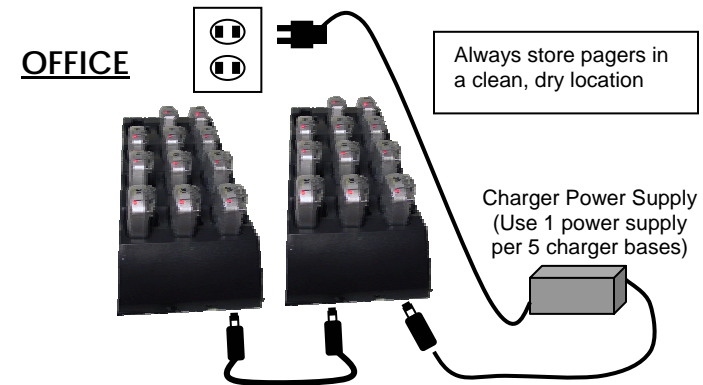


Easy Set Up Instructions

Thank you for purchasing the iPort ServerCall™ paging system. For full detailed information, please consult the instruction manual.

System Configuration: Your ServerCall system was programmed and charged at the factory and will function as soon as it is powered up.

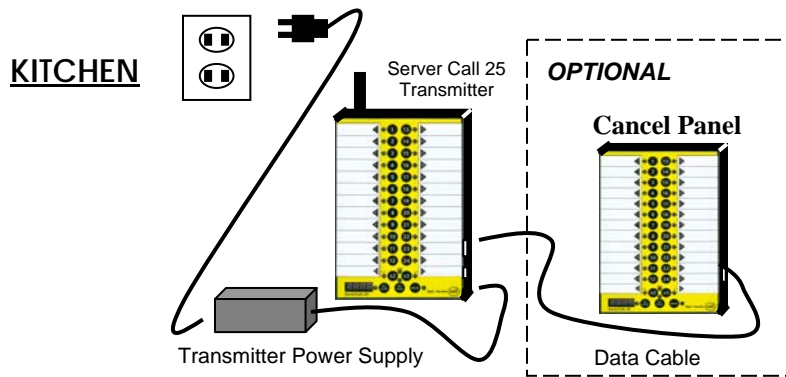

<p>Step 1</p> <p>Lock the antenna to the top left corner of the ServerCall™ transmitter. (fit over plug and twist left to lock antenna in place).</p>	<p>Step 2</p> <p>Plug the ServerCall™ transmitter A/C adaptor into the ServerCall™ transmitter and then into a standard 110v outlet. A surge protector is recommended.</p>	<p>Step 3</p> <p>If more than one charging base is used, connect base units with jumper wires. Plug the charging base A/C adaptor into charging base and then into a standard 110v outlet. A surge protector is recommended.</p>	<p>Step 4</p> <p>Place the pagers into the charging slots. A red light will illuminate to indicate charging. Pagers will be fully charged in 2 hours.</p>	<p>To Use</p> <p>Assign pagers to servers. Write their name in the space provided on the transmitter. To page a server, simply press the button next to the servers' name. Their pager will vibrate.</p>
--	---	---	--	---

Default set up is as follows:

- Clock is set (ServerCall 25 only)
- Sleep Shutdown off
- Re-page Manager feature on.
- Page on transition on – 65 second interval
- Duty Alerts off (ServerCall 25 only)
- Simple page off

This configuration should be satisfactory for most locations. Should the need arise to make any configuration changes, follow the instructions provided in the detailed instruction booklet.

If you have difficulty please call our customer service department at: **800-359-9737** and an iPort Communications representative will be happy to walk you through the process.

iPort Communications
 1566 W. Algonquin Rd
 # 166
 Hoffman Estates, IL
 60195
 Phone 847-359-4987