


PAGER SYMBOLS

 Low Battery Indicator

 Service Area Indicator

 Standard Beep Alert

 Vibrator



Read Key

Select / Shift Key

Function Key

SET ALERT (OPTIONAL- NOT INCLUDED FOR ALL SYSTEM TYPES)

- From standby mode, press function key, the screen will then display 'SET ALERT?'
- Press shift key to enter set alert mode, press function key to select alert type
- Press function key to step thru the alert types: audio, silent sleep (vibrating)
- Press read button to return to standby mode.

SET AUDIO TYPE

- From standby mode, press function key, the screen will then display 'SET ALERT?'
- Press shift key to enter set alert mode, press function key if needed to display audio. When displaying audio press function key again, the screen will display 'AUDIO 00?'
- Press function key to select alert type you prefer (00 10), press read key to confirm setting and return to standby mode.

SET TIME/DATE (OPTIONAL- NOT INCLUDED FOR ALL SYSTEM TYPES)

- Press function key until the screen displays 'SET TIME', press shift key the screen will display '05:59 12-04' Use the function key to change or set the time and date (05- hour, 59- minutes, 12- day of the month, 04- month) 'SU' (SU- weekday)

DELETE ALL MESSAGES

- Press function key until the screen displays 'CLEAR ALL'. Then press shift key to delete all the messages.

TURN PAGER ON/OFF

- To turn a pager on, press and hold the Read key for 3 seconds. The screen should display the pager number to show the pager is operational.
- To turn the pager off, press the function key until the screen displays 'PAGER OFF'. Press the select key to turn the pager off.


Customer Service is a phone call away, you can reach us at (800) 359-9737

PAGER SYMBOLS

 Low Battery Indicator

 Service Area Indicator

 Standard Beep Alert

 Vibrator



Read Key

Select / Shift Key

Function Key

SET ALERT (OPTIONAL- NOT INCLUDED FOR ALL SYSTEM TYPES)

- From standby mode, press function key, the screen will then display 'SET ALERT?'
- Press shift key to enter set alert mode, press function key to select alert type
- Press function key to step thru the alert types: audio, silent sleep (vibrating)
- Press read button to return to standby mode.

SET AUDIO TYPE

- From standby mode, press function key, the screen will then display 'SET ALERT?'
- Press shift key to enter set alert mode, press function key if needed to display audio. When displaying audio press function key again, the screen will display 'AUDIO 00?'
- Press function key to select alert type you prefer (00 10), press read key to confirm setting and return to standby mode.

SET TIME/DATE (OPTIONAL- NOT INCLUDED FOR ALL SYSTEM TYPES)

- Press function key until the screen displays 'SET TIME', press shift key the screen will display '05:59 12-04' Use the function key to change or set the time and date (05- hour, 59- minutes, 12- day of the month, 04- month) 'SU' (SU- weekday)

DELETE ALL MESSAGES

- Press function key until the screen displays 'CLEAR ALL'. Then press shift key to delete all the messages.

TURN PAGER ON/OFF

- To turn a pager on, press and hold the Read key for 3 seconds. The screen should display the pager number to show the pager is operational.
- To turn the pager off, press the function key until the screen displays 'PAGER OFF'. Press the select key to turn the pager off.

Customer Service is a phone call away, you can reach us at (800) 359-9737